

10. FULL 2 YEAR WARRANTY

If within 24 months from the date of purchase this product fails due to a defect in material or workmanship, STI Solar will replace or repair it free of charge at its option.

The warranty does not apply to: Damage caused by accidents; abuse; poor handling; frost or normal wear and tear; products which have been subject to unauthorized repair; or modification or the batteries used in this product.

For further information, please contact your nearest service center detailed on the last page of this instruction manual.

Solar Globelight: Model Nos. 2000, 2010, 2020, 2030 & 2040

CONTENTS

1. Introduction	page 3
2. Security Instructions	page 3
3. Overview	page 4
4. Components	page 4
5. Assembling and using your product	page 5
6. Cleaning and maintenance	page 5
7. Functionality Problems	page 6
8. Technical data	page 6
9. Spare Parts	page 6
10. Full 2 Year Warranty	page 7

These instructions relate ONLY to the Solar Globelight and contain important information for using the product for the first time. Please keep these instructions for later reference. They should always accompany the product in the event of transfer to a new user.

1. INTRODUCTION

Thank you for purchasing the Solar Globelight. You have purchased a product that complies with the latest and most up-to-date solar technology available.

This product complies with the European and National Standards. The relevant certificates of conformity are held by STI Group.

To preserve these standards and in order to maintain safety you should adhere to the instructions for use detailed in this manual.

2. SECURITY INSTRUCTIONS

In the event of any problems arising or damage occurring as a result of misuse the manufacturers warranty will be deemed cancelled. The manufacturer is not responsible for any claims or damages arising from the misuse of this product. For safety reasons and in order to maintain standards (CE) you are prohibited from altering or changing any component in the Solar Light.

Please follow the instructions very carefully.

For commercial applications due care and attention must be paid to the Health and Safety Standards in your jurisdiction.



Float it



Stand it



Stake it

7. FUNCTIONALITY PROBLEMS

Light does not switch on in darkness

Check whether the switch is in the "ON" position. Another light source (streetlight) simulates daylight and prevents the light from switching on automatically. Position the light in a darker place.

Light does not switch on at all of just for a short time even though there had been full day sunshine.

Battery is dead. Replace the rechargeable batteries.

8. TECHNICAL DATA

Operation Voltage:	1.2 V green, blue 2.4 V yellow, red, white
Solar module:	3.0 V green, blue 4.5 V yellow, red, white
Light source:	One Super Bright LED
Battery:	1.2 V 1200 mAh Ni-MH
Number of batteries:	(2) yellow, red, white (1) green, blue
Battery Operation capacity:	up to 24 hours

9. SPARE PARTS

AA - NiMH Rechargeable Battery: Item No. 2999

Globelight Stake & Pedestal: Item No. 2998